


SUPERSEAR INSTALLATION

©Steve_in_NC 2009

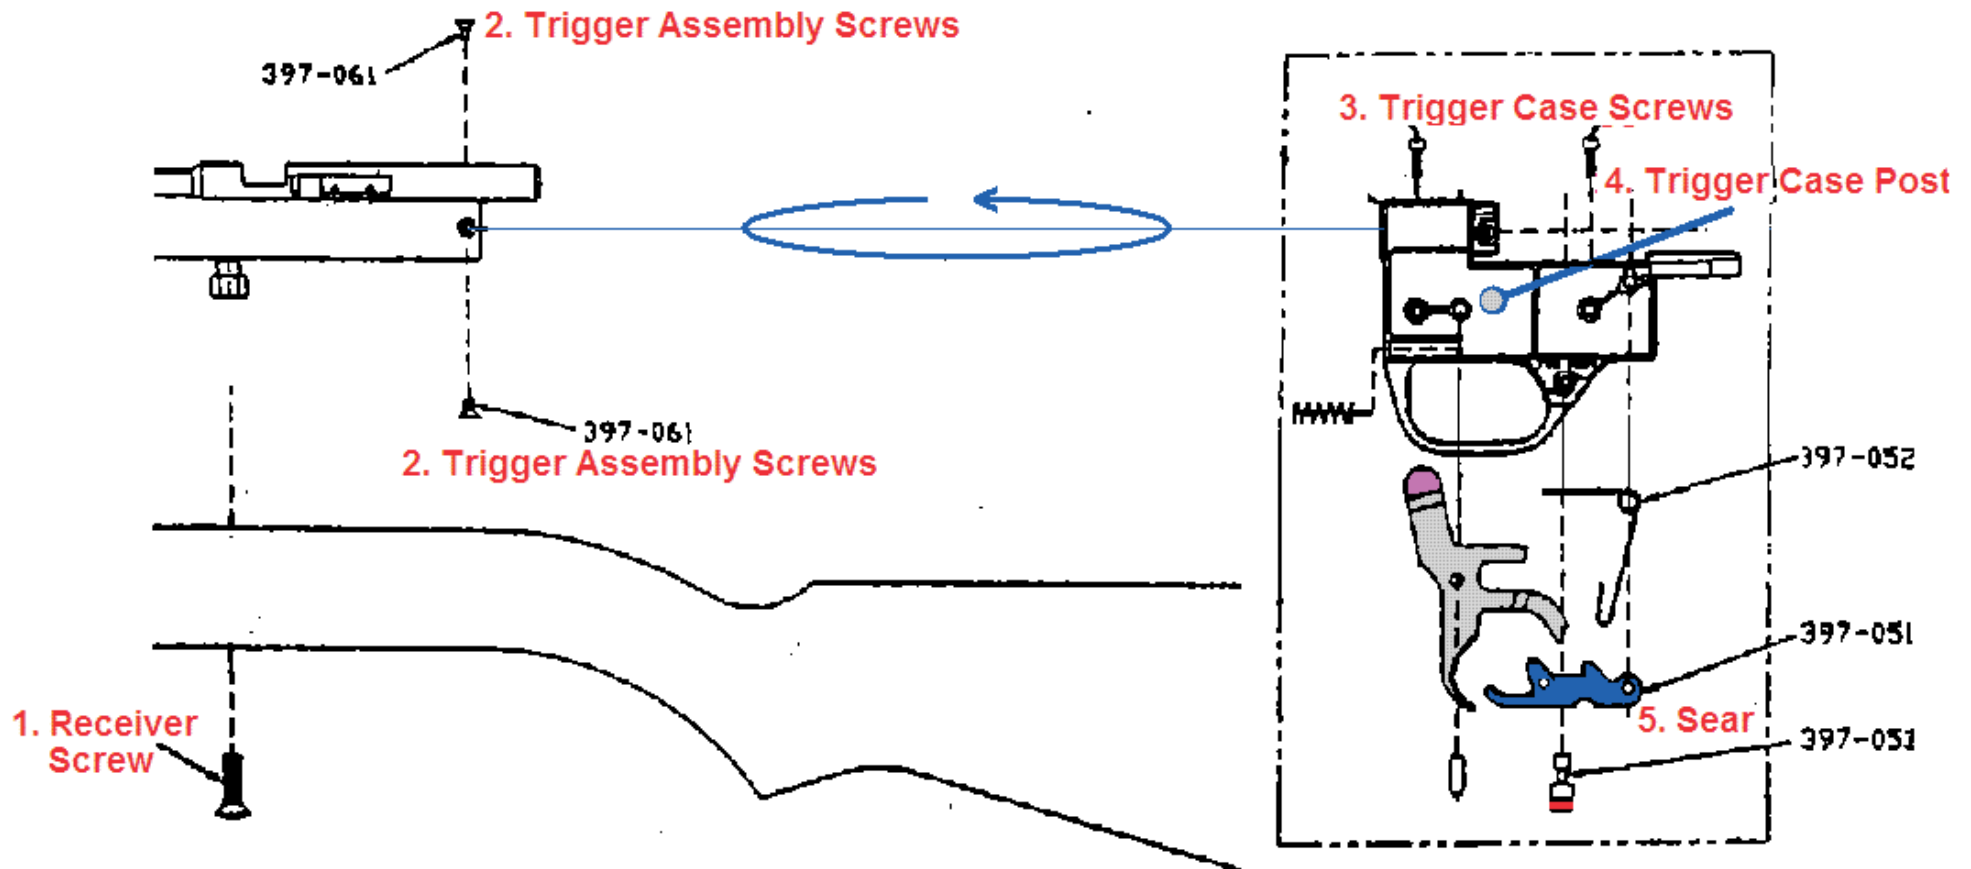

SAFETY FIRST!!! VERIFY THAT GUN IS UNLOADED, UNCOCKED, AND UNCHARGED!

1. Remove Receiver Screw and lift action from stock.
2. Remove Trigger Assembly Screws and Trigger Assembly.
3. Remove Trigger Case Screws and separate halves of Trigger Case.
4. Grind, file, or drill Trigger Case Post for clearance. Clean Case.
5. Install SuperSear in place of stock Sear.
6. Lube and reassemble.

OPTIONAL: For optimum performance, points of contact on trigger blade and hammer may be polished before lubrication and reassembly.

